


## OVERALL ASSEMBLY



ITEM #	DESCRIPTION	PART #
1	STEERING COVER	3644
2	NEUTRAL SWITCH BRACKET	3704TK
	NEUTRAL SWITCH	3695
3	ZTR CASTER SERVICE ASSEM.	3725
4	HYDRO RELEASE	3678
5	TRANSMISSION MOUNT	3703
6	TRANSMISSION LEFT	3601
	TRANSMISSION RIGHT	3600
7	TIRE/WHEEL - 18 X 9.50-8	3604
128	SWAY BAR LEFT	3665
	SWAY BAR RIGHT	3664
129	BATTERY BRACKET	3696TK
NOT SHOWN	WIRING HARNESS	3720
	SOLENOID	9043
	DECK BELT	3694
	ENGINE TO DECK BELT	4219
	TRANSMISSION BELT	BA50

## BLADE DRIVER

## ENGINE SET-UP

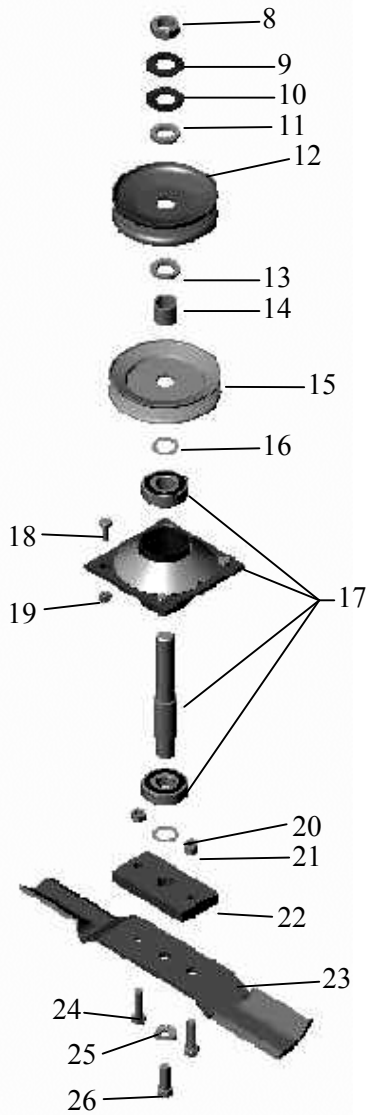

## TRANSMISSION IDLER (3715)

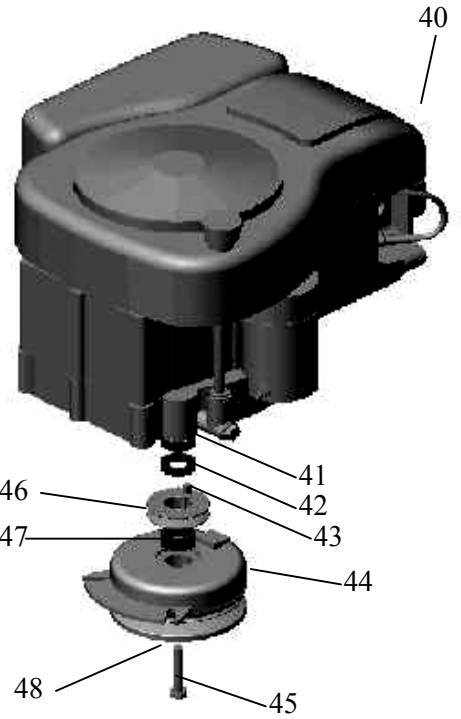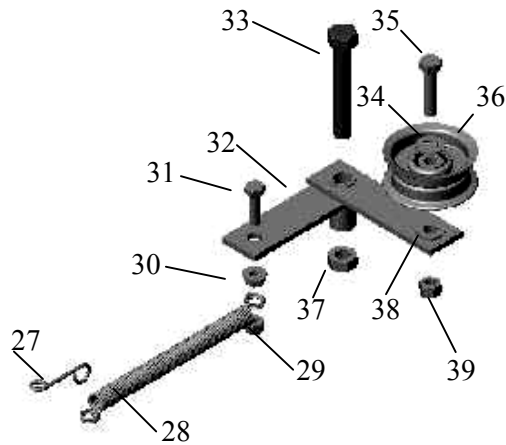



ITEM #	DESCRIPTION	PART #
8	3/4 NUT	NB175
9	BELLEVILLE WASHER	AS155
10	BELLEVILLE WASHER	AS155
11	WASHER	NB184
12	BLADE PULLEY	B104
13	WASHER	NB184
14	PULLEY SPACER	6114CS
15	BLADE PULLEY 4 1/2"	B4104
16	WASHER	9021
17	BLADE DRIVER ASMBLY CENTER	9058
	BLADE DRIVER ASMBLY R&L	9018
18	1/4 BOLT	NB250
19	1/4 NUT	NB180
20	WASHER	9021
21	3/8 LOCKNUT	NB216
22	BLADE MOUNT PLATE	9008
23	BLADE 15"	4221
24	3/8 BOLT	NB166
25	BELLEVILLE WASHER	NB607
26	3/8 BOLT	NB238

ITEM #	DESCRIPTION	PART #
27	WIRE LINK	BRS6H
28	SPRING	682S
29	5/16 NUT	NB181
30	5/16 FLANGE NUT	NB170
31	5/16 BOLT	NB501
32	TRANS. IDLER ARM	3690TK
33	1/2 BOLT	NB131
34	3/8 WASHER	NB272
35	3/8 BOLT	NB107
36	IDLER PULLEY	B27
37	1/2 NUT	NB121
38	3/8 WASHER	NB272
39	3/8 NUT	NB280


ITEM #	DESCRIPTION	PART #
40	ENGINE	NOT AVAIL.
41	ENGINE PULLEY SPACER	BB105SL
42	ENGINE PULLEY SPACER	BB105SL
43	1/4 X 1/2 KEY	4258
44	ELECTRIC CLUTCH	688EC
45	7/16 BOLT	NB685
46	ENGINE PULLEY	2411
47	ENGINE PULLEY SPACER	689S
48	BELLEVILLE WASHER (2)	699

# SEAT BASE ASSEMBLY

## STEERING (LEFT)

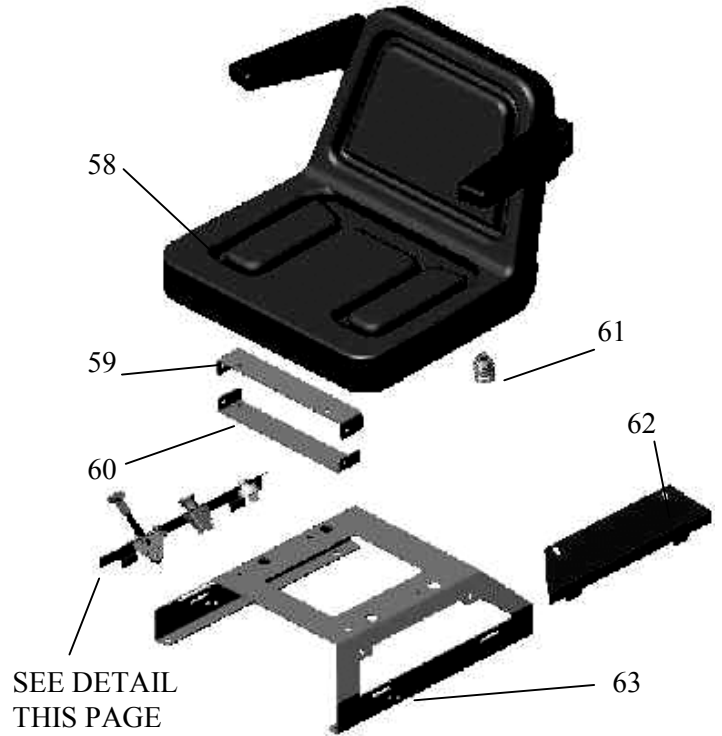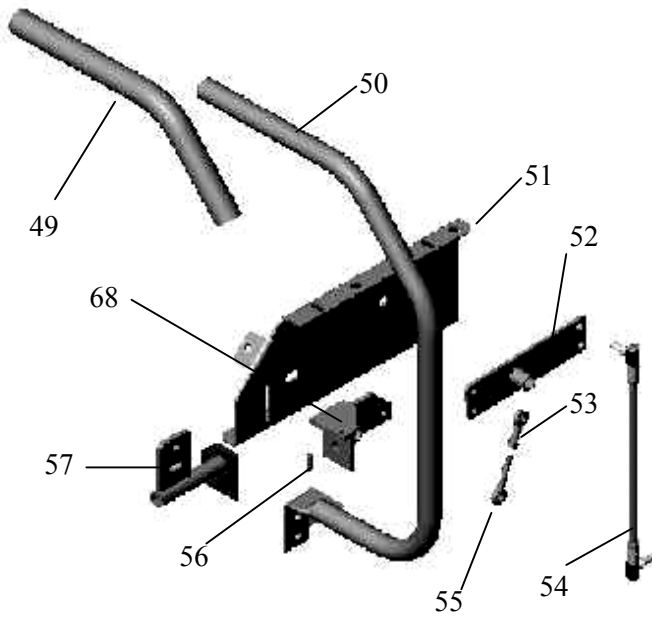


## CONTROL CARD

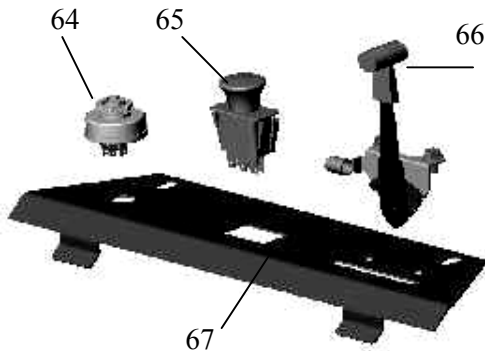


ITEM #	DESCRIPTION	PART #
49	HANDLE GRIP	3673
50	DIRECTIONAL HANDLE	3685TK
51	CONTROL CARD LEFT	3620TK
	CONTROL CARD RIGHT	3621TK
52	UNIVERSAL PIVOT PLATE	3698TK
53	CONNECTOR (FEMALE)	3608
54	DIREC. CONTROL LINKAGE	3670
55	CONNECTOR (MALE)	3721
56	1/4 SET SCREW	NB310
57	HANDLE MOUNT LEFT	3636TK
	HANDLE MOUNT RIGHT	3635TK
58	SEAT ASSEMBLY	3724
	ARM REST KIT	3603
59	SEAT BRACKET	3662TK
60	SEAT BRACKET	3661TK
61	SPRING	3609
62	RIGHT CONTROL COVER	3726
63	SEAT MOUNT	3613C
64	KEY SWITCH	3623
65	PTO SWITCH	3605
66	THROTTLE CABLE ASSY	3640
67	LEFT CONTROL COVER	3722
68	LEFT PIVOT WELDMENT	3700TK
	RIGHT PIVOT WELDMENT	3699TK

## FRAME

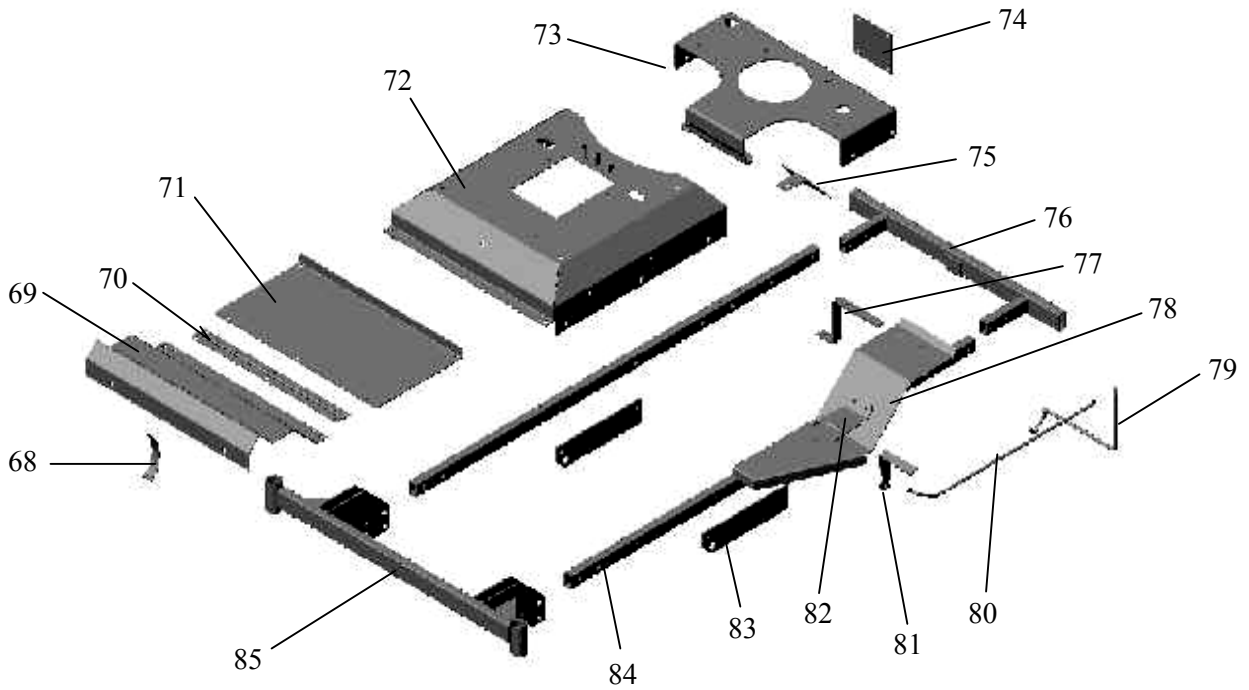


## DECK LIFT

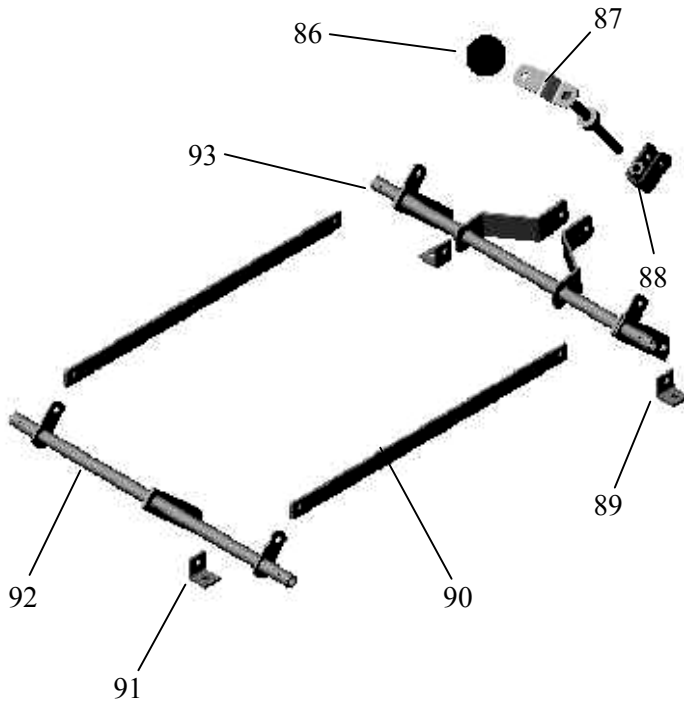


ITEM #	DESCRIPTION	PART #
68	HEIGHT INDICATOR	3728
69	KICK PLATE	3729
70	ACCESS PLATE HINGE	3675TK
71	ACCESS PLATE	3631TK
72	SEAT BASE	3730
73	UPPER MOTOR BASE	3611TK
74	REAR COVER	3711TK
75	TRANS. FAN COVER	3712TK
76	BUMPER	3686TK
77	FENDER MOUNT	3654TK
78	FENDER LEFT	3641TK
	FENDER RIGHT	3642TK
79	E - BRAKE REAR LINK	3652
80	E - BRAKE SIDE LINK	3651
81	BRAKE LEVER	3731
82	BEVERAGE RETAINER	3643TK
83	REAR HANGER BRACKET	3693TK
84	FRAME SIDE	3614TK
85	FRONT FRAME	3650TK
86	PLASTIC KNOB	4857
87	HEIGHT ADJUST CRANK	3710TK
88	HEIGHT LIFTER	3705TK
89	LIFT PIVOT	3663TK
90	HEIGHT LINK	3660TK
91	LIFT PIVOT	3663TK
92	FRONT TORSION	3683TK
93	REAR TORSION	3684TK

## MOWING DECK

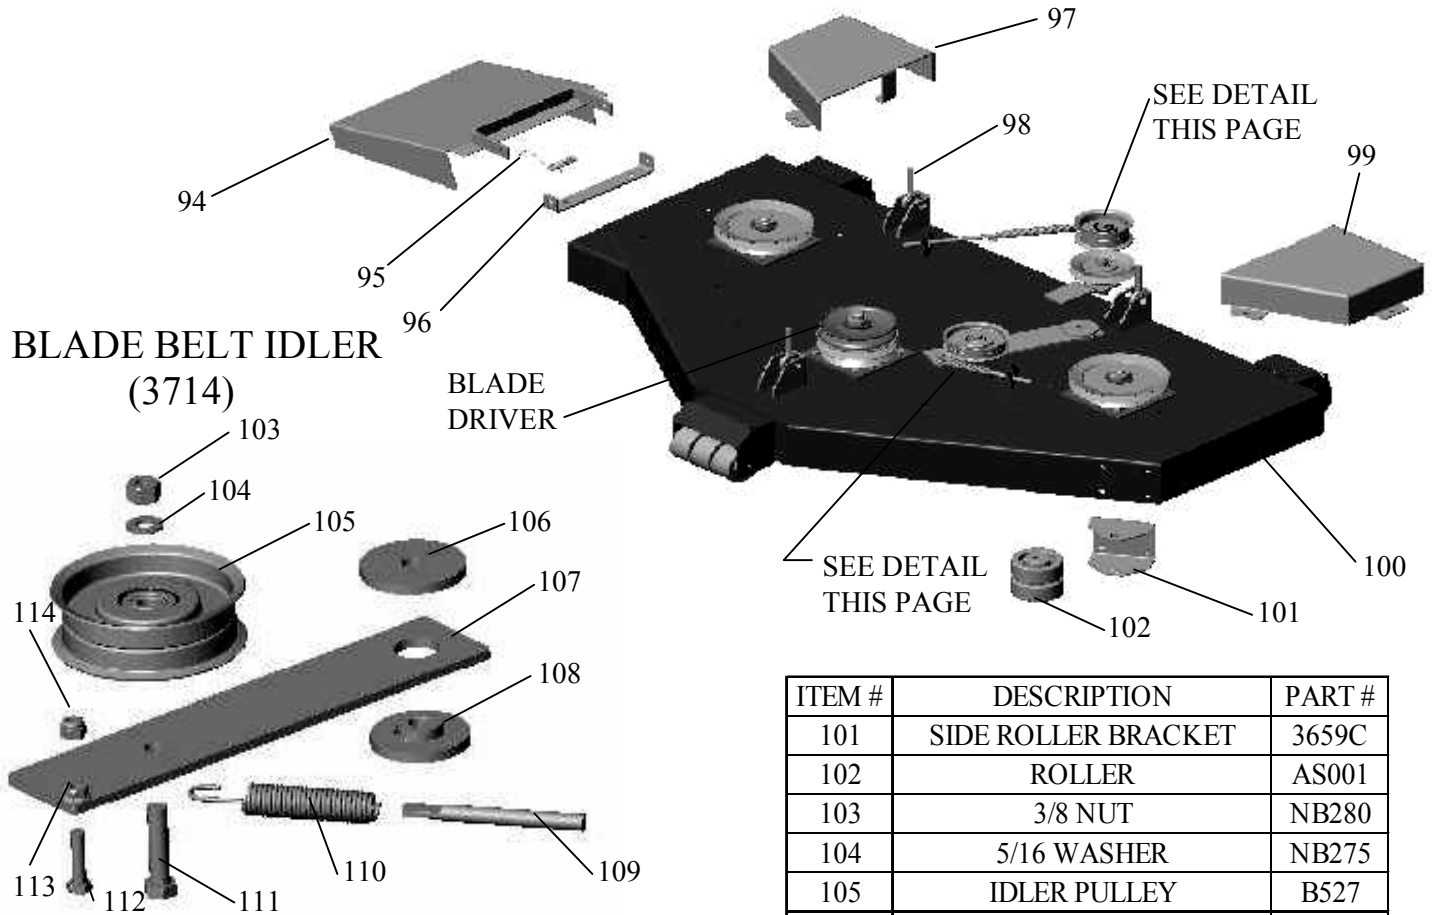

## LOWER BELT IDLER (3713)

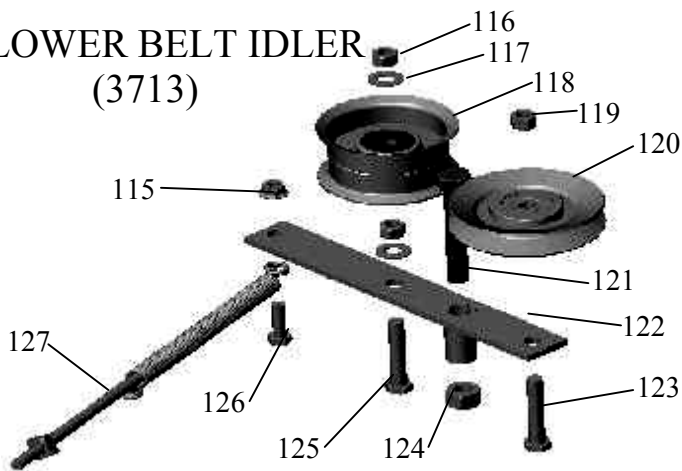

ITEM #	DESCRIPTION	PART #
101	SIDE ROLLER BRACKET	3659C
102	ROLLER	AS001
103	3/8 NUT	NB280
104	5/16 WASHER	NB275
105	IDLER PULLEY	B527
106	IDLER SPACER	6040
107	TENSION IDLER ARM	3676TK
108	IDLER BUSHING	6037
109	5/16 SPADE BOLT	NB261
110	IDLER TENSION SPRING	6048
111	3/8 BOLT	NB107
112	1/4 BOLT	NB102
113	1/4 FLANGE NUT	NB524
114	1/4 NYLOK NUT	NB180
115	5/16 FLANGE NUT	NB170
116	3/8 NUT	NB280
117	3/8 WASHER	NB272
118	IDLER PULLEY	7509
119	3/8 NUT	NB280
120	IDLER PULLEY	3622
121	1/2 BOLT	NB131
122	LOWER BELT IDLER ARM	3691TK
123	3/8 BOLT	NB231
124	1/2 NUT	NB213Z
125	3/8 BOLT	NB231
126	5/16 BOLT	NB501
127	ENGAGEMENT ROD	B25RT

ITEM #	DESCRIPTION	PART #
94	GRASS CHUTE	3732
95	TORSION SPRING	9100
96	CHUTE MOUNT	6030TK
97	BELT/PULLEY COVER	3656TK
98	3/8 EYE BOLT	NB204
99	BELT/PULLEY COVER	3658TK
100	MOWER DECK	3733