



OWNER'S MANUAL

STARTING SERIAL #:
99-307001


MODEL NO.
T1260
T1360
T1460



IMPORTANT

Read and follow all
Safety Precautions and
Instructions before
operating this
equipment.

Rev.04-288

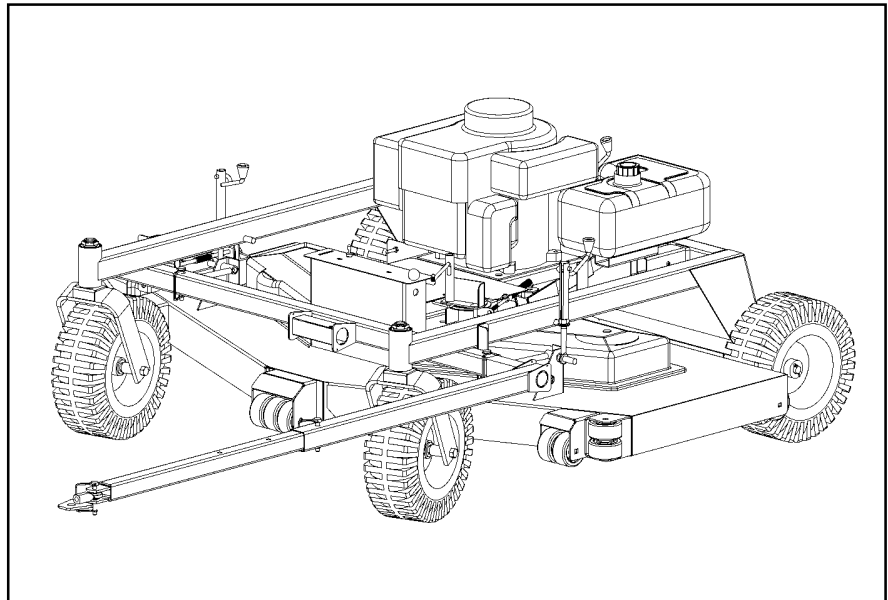

60" UNIVERSAL TRAILMOWER

Assembly
Operation
Service and Adjustment
Repair Parts

- Turn off the blades when not mowing. Before leaving the machine, turn off the blades and stop the engine.
- Watch for traffic when operating near or crossing roadways.
- Do not operate the mower if it has been dropped or damaged in any manner or if the mower vibrates excessively. Excessive vibration is an indication of damage. Repair mower as necessary.
- Dress properly. Do not operate the mower when barefoot or wearing open sandals. Wear only solid shoes with good traction when mowing.
- Do not operate the machine while under the influence of alcohol or drugs.
- Do not operate on slopes greater than 15 degrees.
- Never tamper with safety devices. Check their proper operation regularly.
- Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- Never make adjustments or repairs with the engine running.
- Mower blades are sharp and can cut. Wrap the blades or wear gloves, and use extra caution when servicing them.



SAFETY DECALS

Replace decals immediately if damaged. Order by part number from Swisher Mowers



OD45- Warning Decal



OD43- Flying Debris Decal

OD55- Danger Decal



OD11- No step Decal



OD33- Speed Decal



OD29- Danger Decal

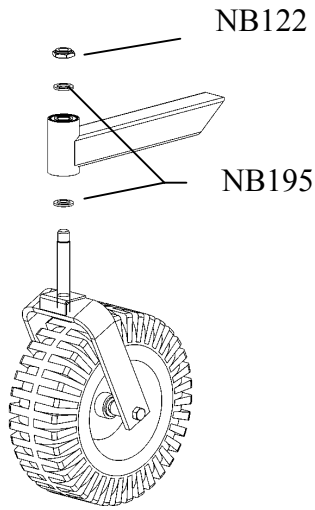


Figure 01

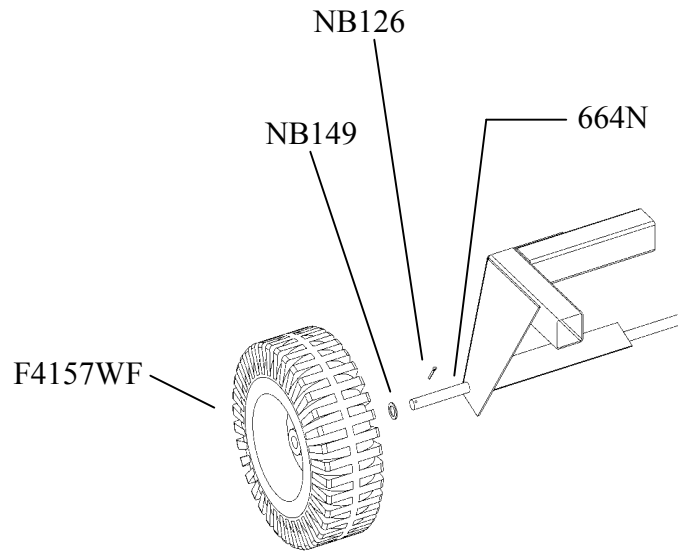


Figure 02

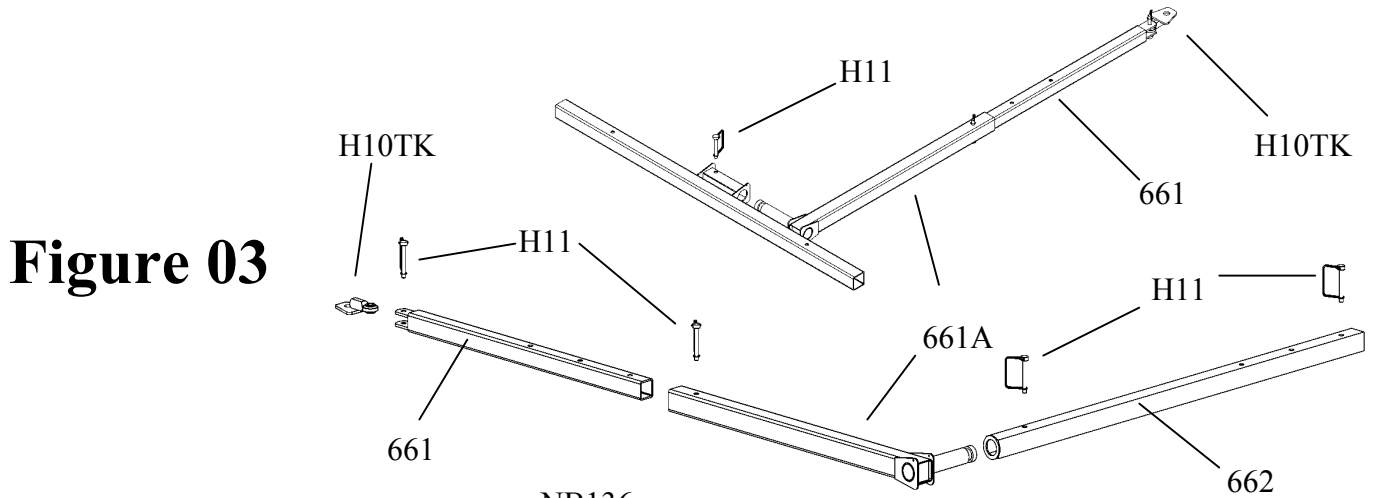


Figure 03

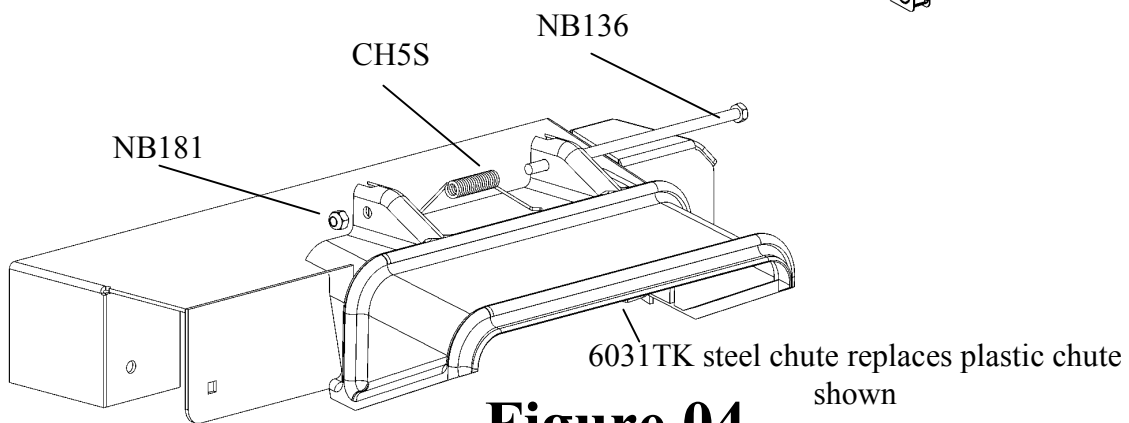


Figure 04

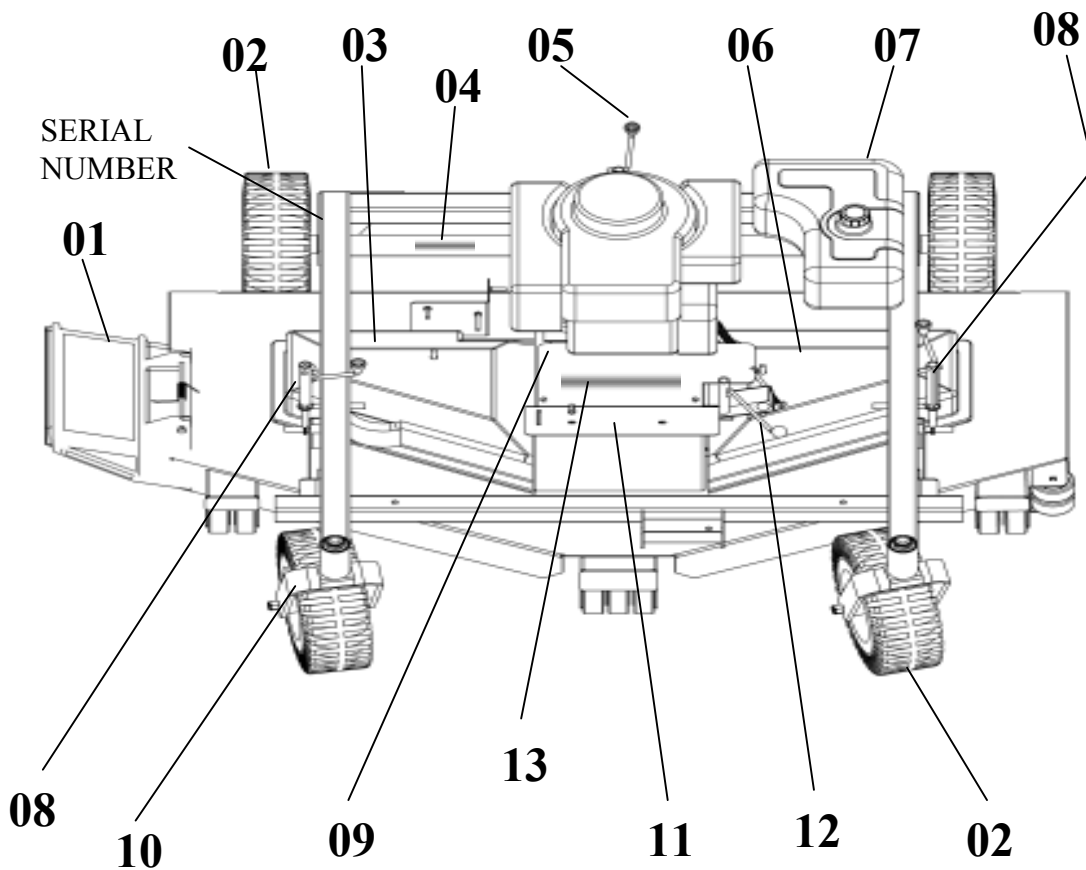


Figure 05

Eye Bolt #6599 is not sold with Item #8. Must purchase separately.

Item #	Description	Part #	Item #	Description	Part #
1	Grass Chute	6031TK	8	Height Adjust Assembly	H7N
	Bolt/Nut	NB136/NB181	Sold seperately	Eye Bolt	6599
	Spring	CH5S		Stabilizer Arm	6696
2	Tire/Wheel/Bearing	F4157W		Plastic Bushing	T2PB
3	Right Belt Guard	6155RN		Ruler Decal	OD41
	Acorn Nut	NB120		Knob	H7K
4	No Step Decal	OD11		5/16 Pal Nut	NB276
5	Height Adjust Assembly	H7N	9	Engine Plate	6155NFC
	Plastic Bushing	T2PB	10	Front Caster Assembly	6774C
	Ruler Decal	OD41		Tire/Wheel/Bearing	F4157W
	Eye Bolt	6599		Bolt/Nut	NB624/NB595
	Knob	H7K		Spacer (Exterior)	663L
	5/16 Pal Nut	NB276		Washer	NB178
6	Left Belt Guard	6155LN		Caster Fork	665C
	Acorn Nut	NB120		Caster Nut	NB122
7	Gas Tank	6102T		Washer	NB195
	Gas Cap	6102NC	11	Throttle Plate	6155THC
	Gas Tank Mount	6102NTK	12	Engage Lever	6720C
	Rubber Bushing	AS119	13	Swisher Decal	OD99116
	Fuel Shutoff Valve	AS120			
	Fuel Line Hose Clamp	6FLC			
	Fuel Line	AS140			

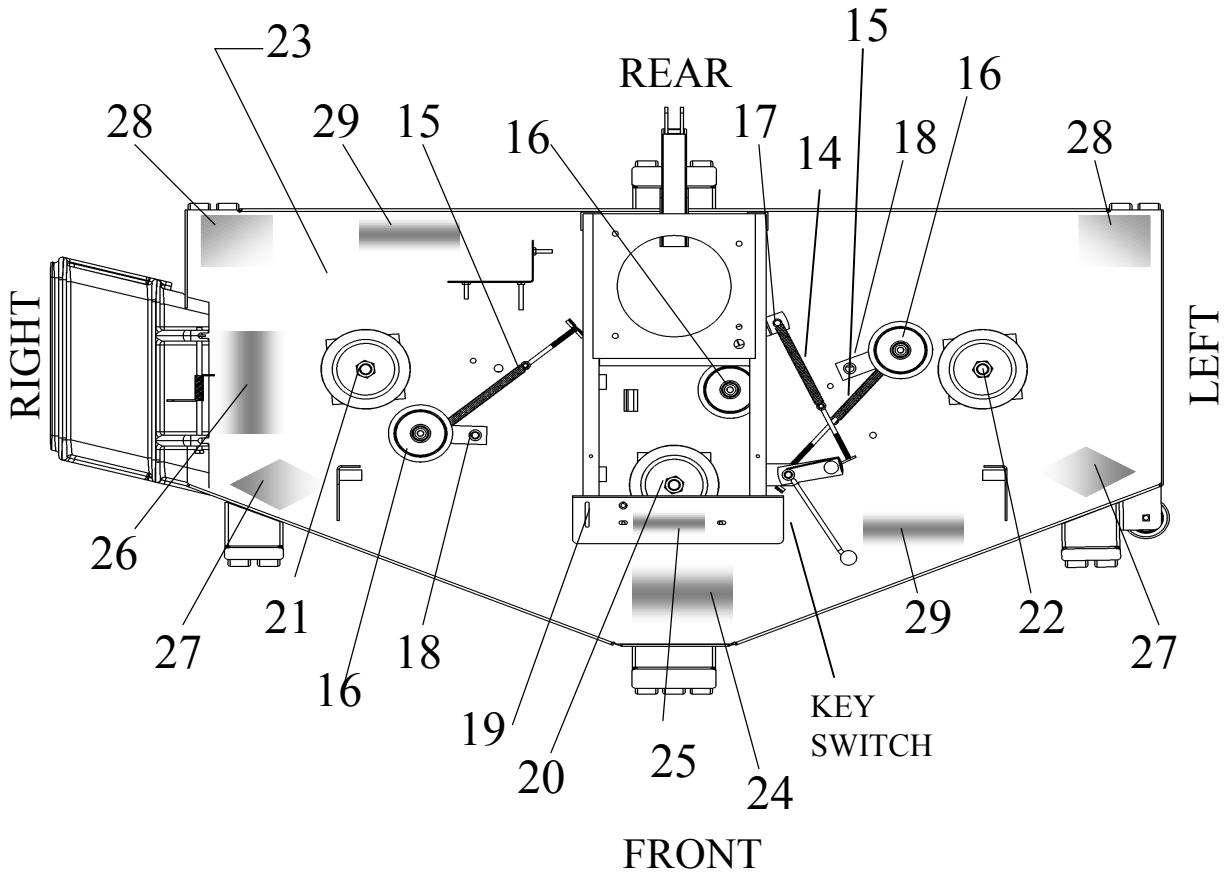


Figure 06

Item #	Description	Part #	Item #	Description	Part #
14	Clutch Idler Rod/Spring	3123TK/682S	22	Blade Driver Left	9086
15	Idler Rod/Spring	6704TK/682S	23	Deck	6725C
16	Idler Pulley	B527	24	Warning Serious Injury Decal	OD45
17	Clutch Idler Arm	6709TK	25	5 MPH Decal	OD33
18	Idler Bracket	6681TK	26	Caution - Deflector Decal	OD43
19	Throttle Decal	OD58	27	60" Decal	OD99128
20	Blade Driver Center	9084	28	Danger Triangle Decal	OD55
21	Blade Driver Right	9085	29	Danger Decal	OD29

Blade Driver Update		
Position	Part #	Replaces
Center	9084 Blade Driver Assembly	6769 Blade Driver Assembly and 9002 Shaft
Right	9085 Blade Driver Assembly	9059 Blade Driver Assembly and 9000 Shaft
Left	9086 Blade Driver Assembly	9059 Blade Driver Assembly and 9001 Shaft


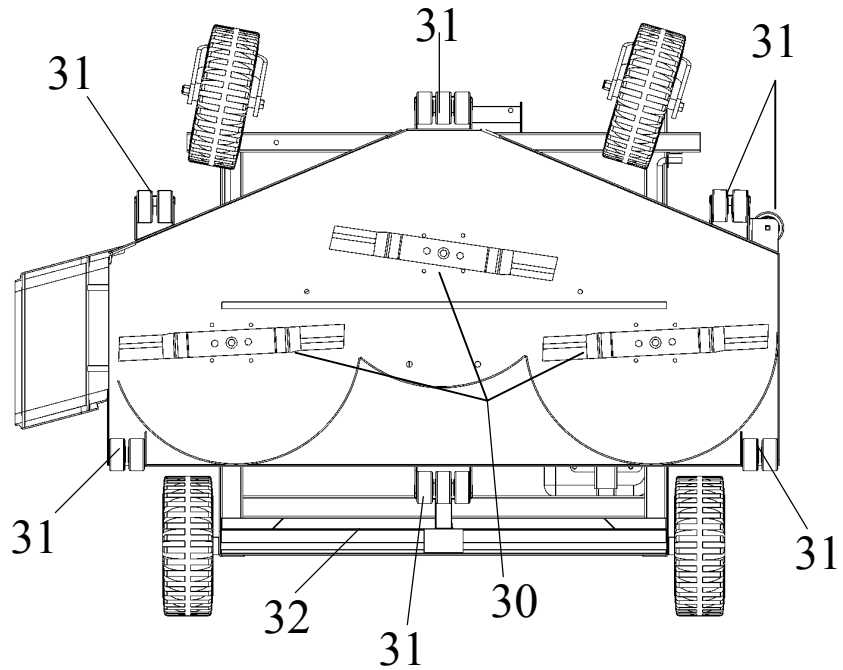


Figure 07


Item #	Description	Part #
30	Blade (3)	9004
31	Anti-Scalp Roller	AS001
32	Rear Axle	664N

MIDDLE CENTER
BLADE DRIVER
PULLEY BELT **66LR2**

BOTTOM CENTER
BLADE DRIVER
PULLEY BELT **66LR2**

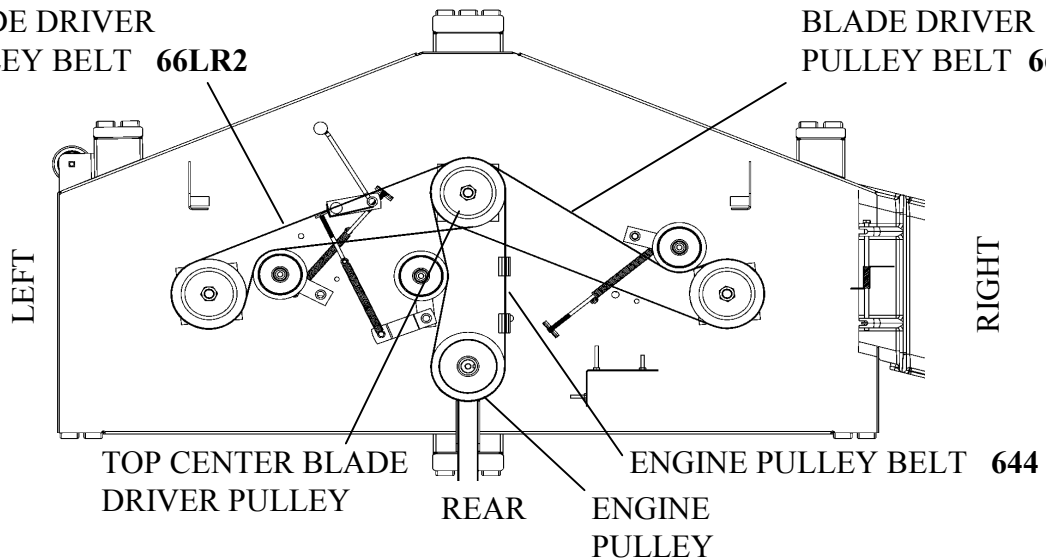

BELT CONFIGURATION

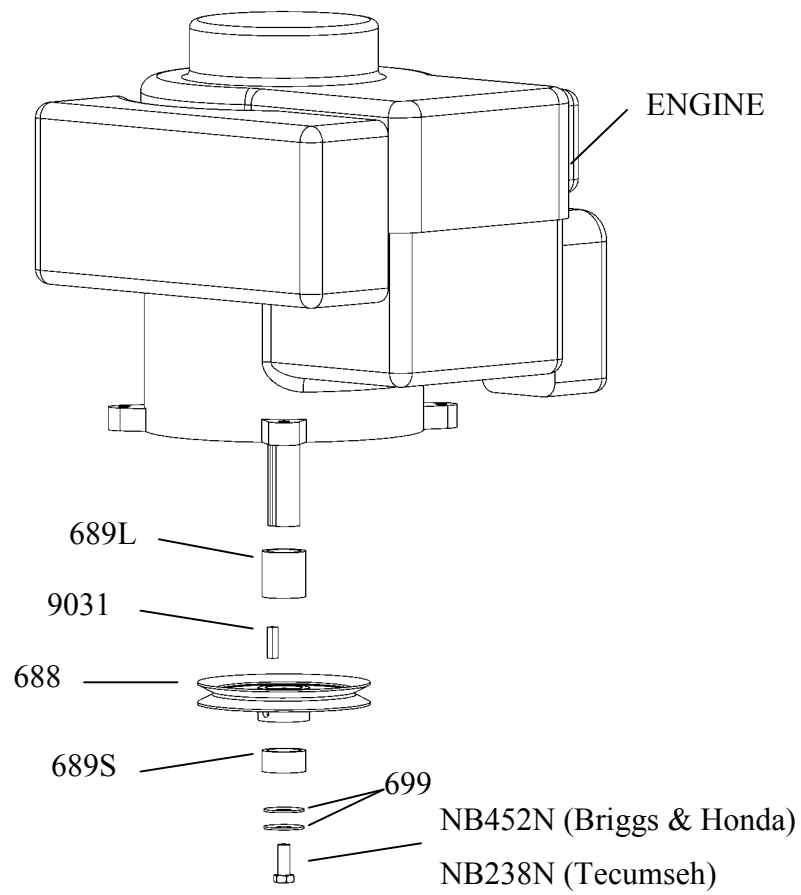


Not Shown OIL DRAIN VALVE + CAP AS122, AS123


ENGINE PULLEY ASSEMBLY

BLADE DRIVER ASSEMBLIES

EFFECTIVE AFTER SERIAL# L199307001

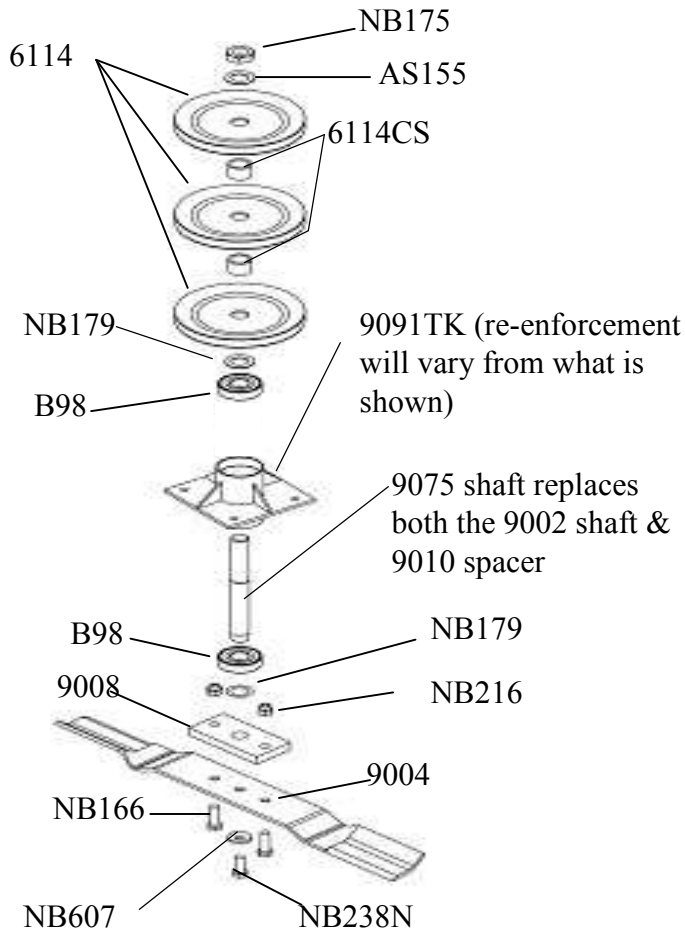


CENTER

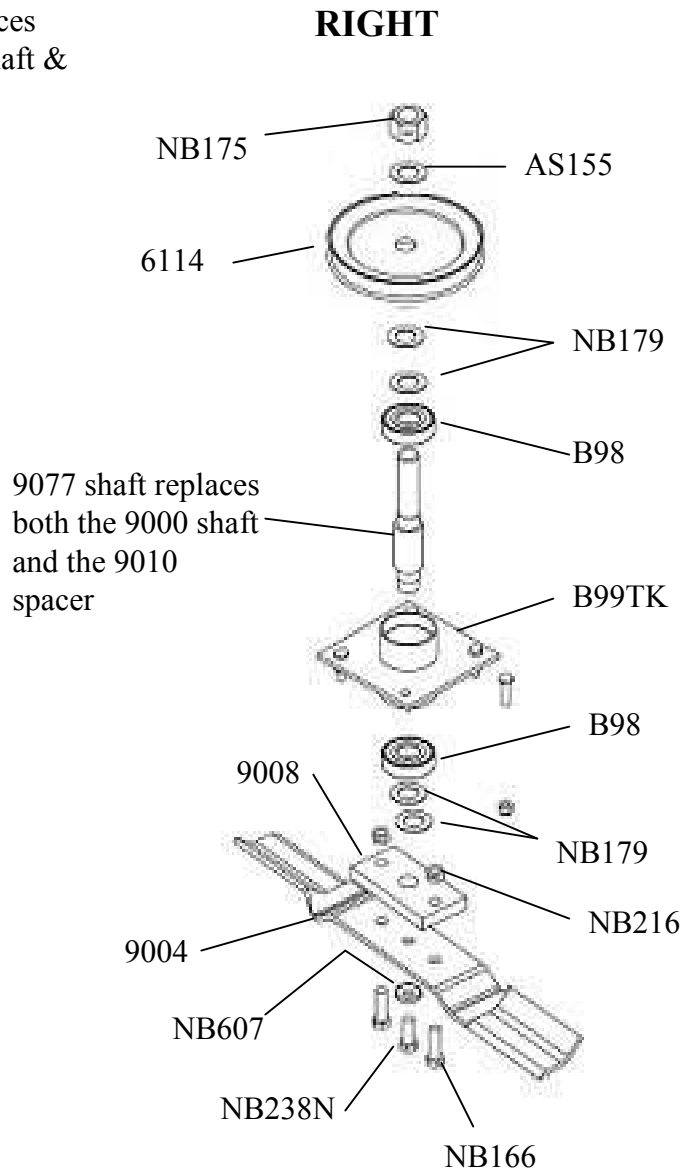


RIGHT


LEFT

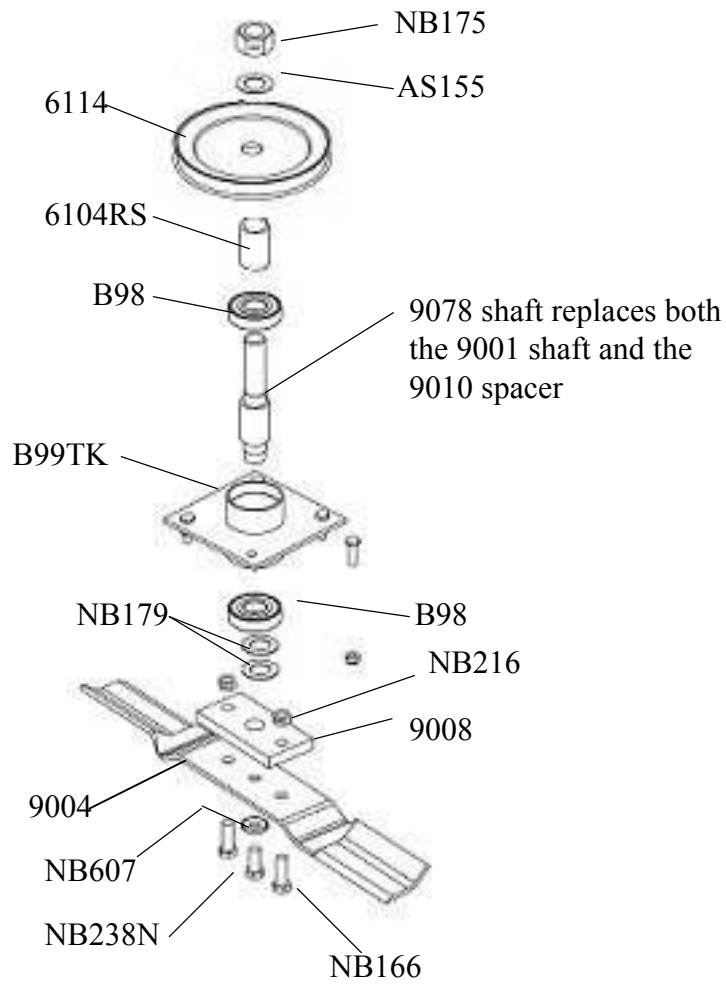

ELECTRIC START WIRING SCHEMATIC

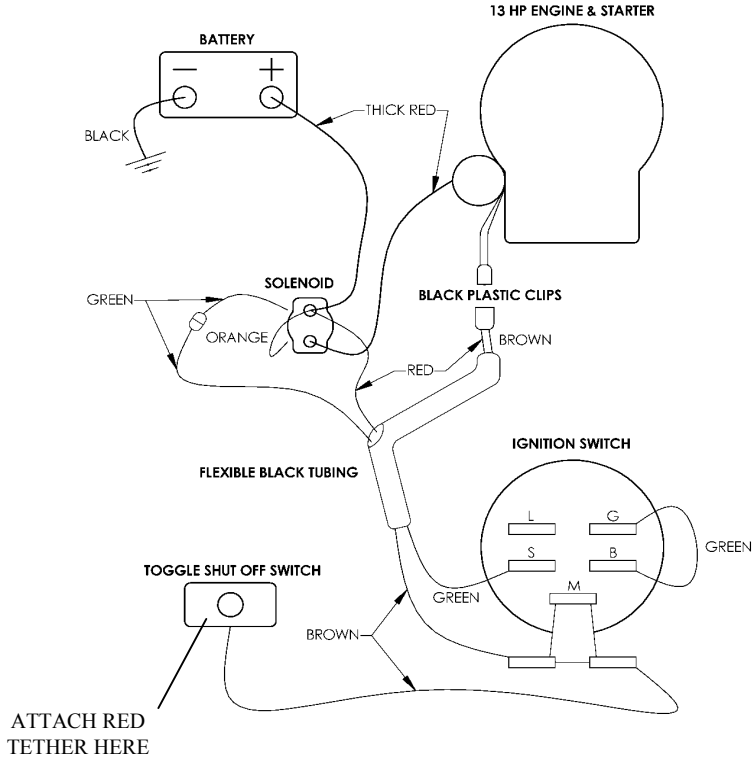

HONDA WIRING SCHEMATIC

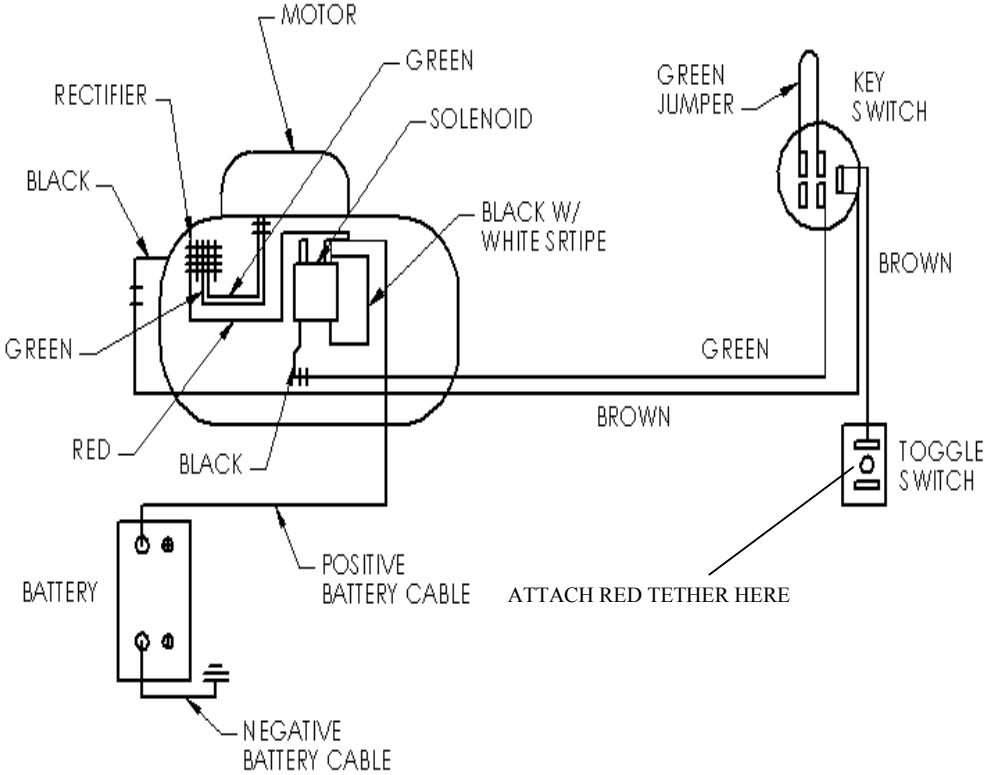

Items Not Shown	
Item	Part #
Wiring Harness (Briggs)	WHN60B
Wiring Harness (Tecumseh)	WHN60T
Wiring Harness (Honda)	WHN60H
Solenoid	9043
Frame Caster Bearings	B98
Key Switch	KS12
Battery Cable - Red	BCSR
Battery Cable - Black	BCS
Engine Belt	644
Blade Driver Belts	66LR2